

# **Installation** **LGA 1366 Standard Cooler**

## **Installation Process**

- 1 Position heat sink over the processor. Align fasteners with motherboard hole pattern (see Figure 1).
- 2 Thumb pressure to the top of each of the 4 fastener caps (see Figure 2). You will hear an audible "click" upon full engagement.
- 3 Make sure all the fasteners are fully engaged. Installation is now complete ( see Figure 3).

## **Remove Process**

- 1 Turn the cap conter-clockwise to the finish position. (See the Figure 4.)
- 2 Pull up the Cap, thus releasing the fastener from the motherboard. Repeat this step for each fastener. (See the Figure 4.)

Figure 1

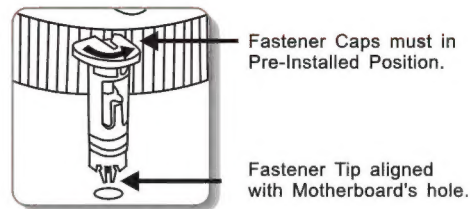


Figure 2

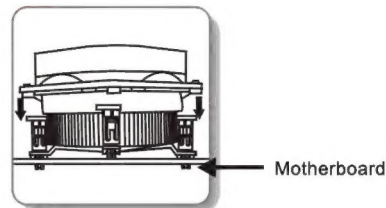


Figure 3

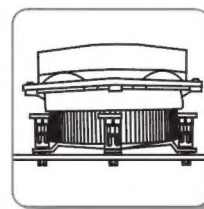


Figure 4

